
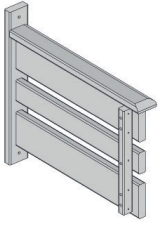
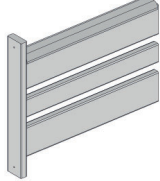





Montageanleitung für Ofenschutz


Art.-Nr.: 500.0124.90.10

Pos	Bild	Abmessung (mm)	Anzahl (Stück)
①	B500.03.0209 	59/424/360	1
②	B500.03.0208 	50/428/360	1
③	K001.3535.0004 	3,5 x 35	9


Abkürzungen/Symbole




- Zuluftöffnung






- erst vorbohren, dann schrauben

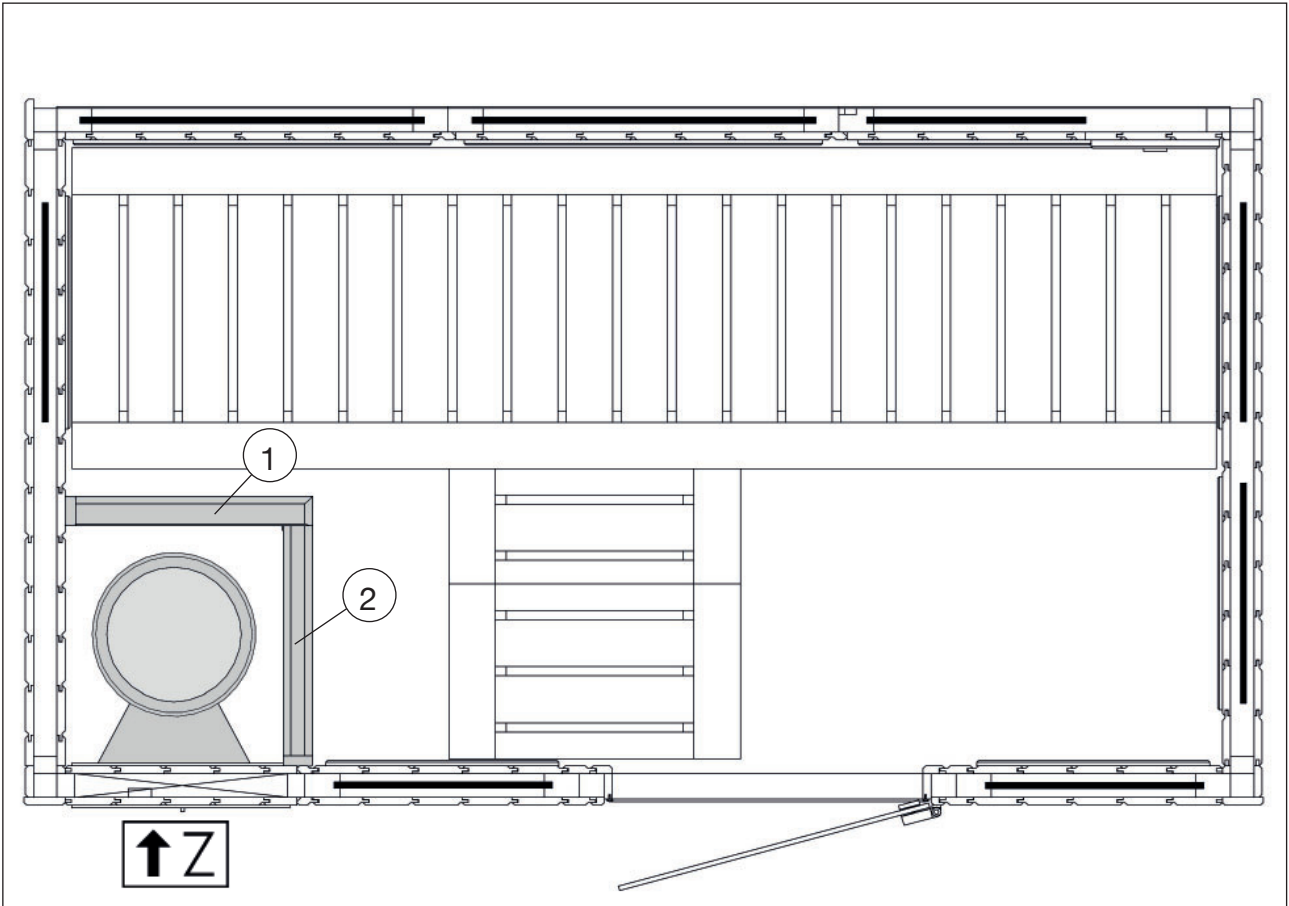

1

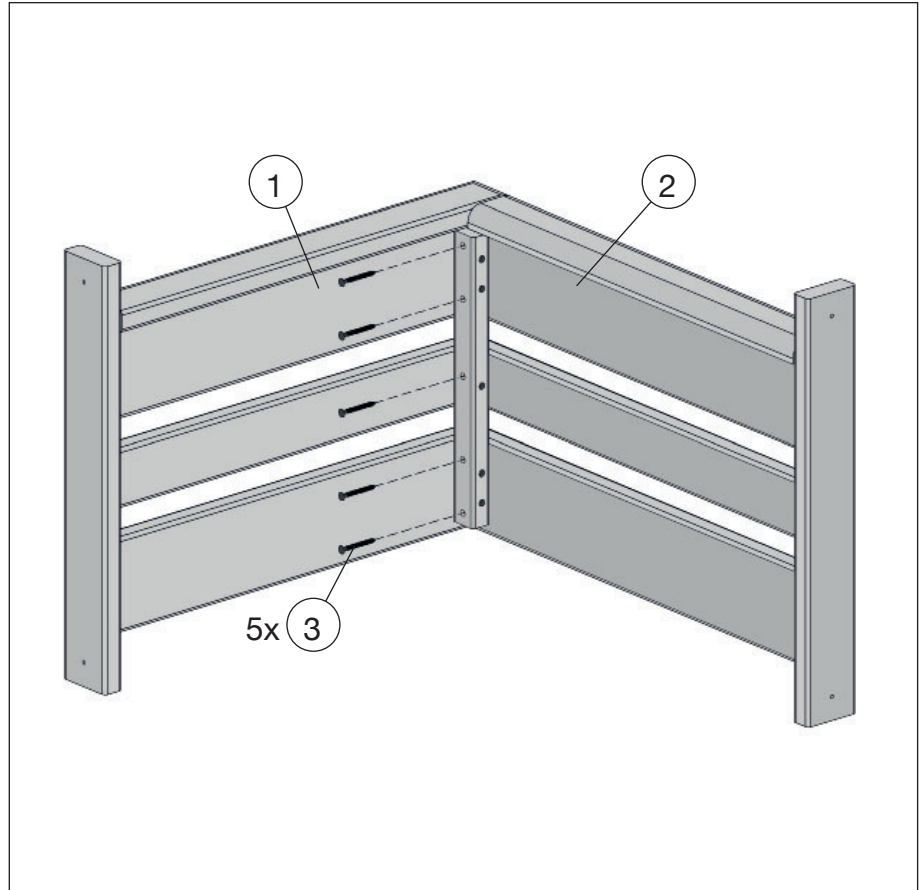

2

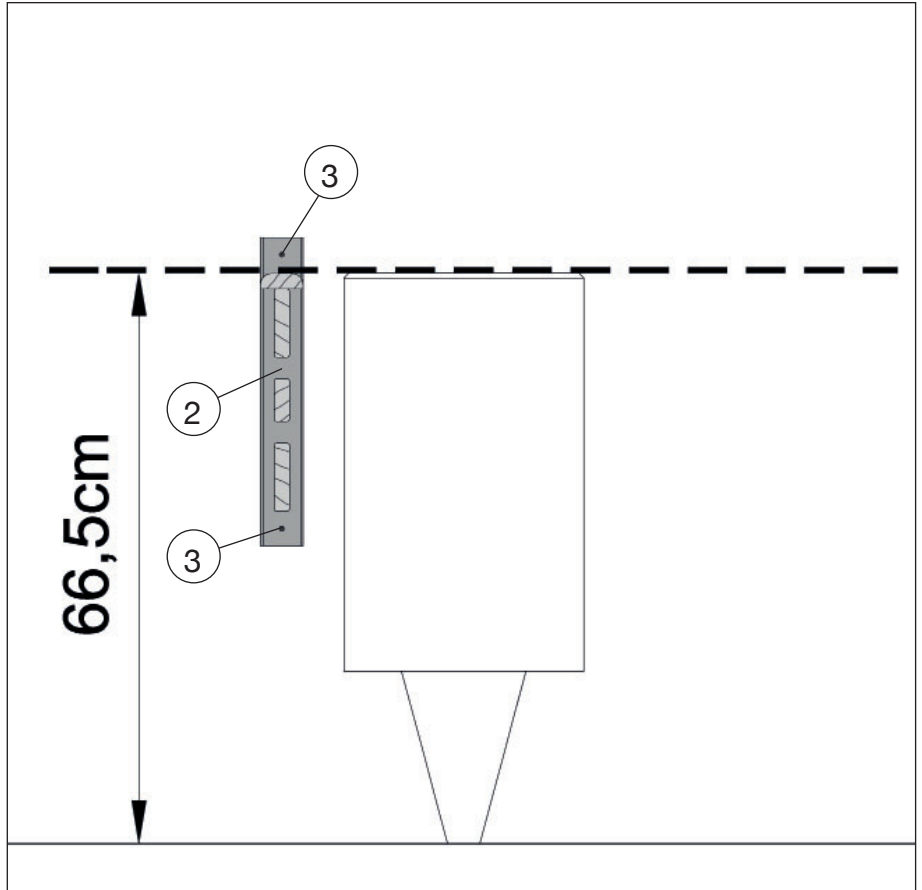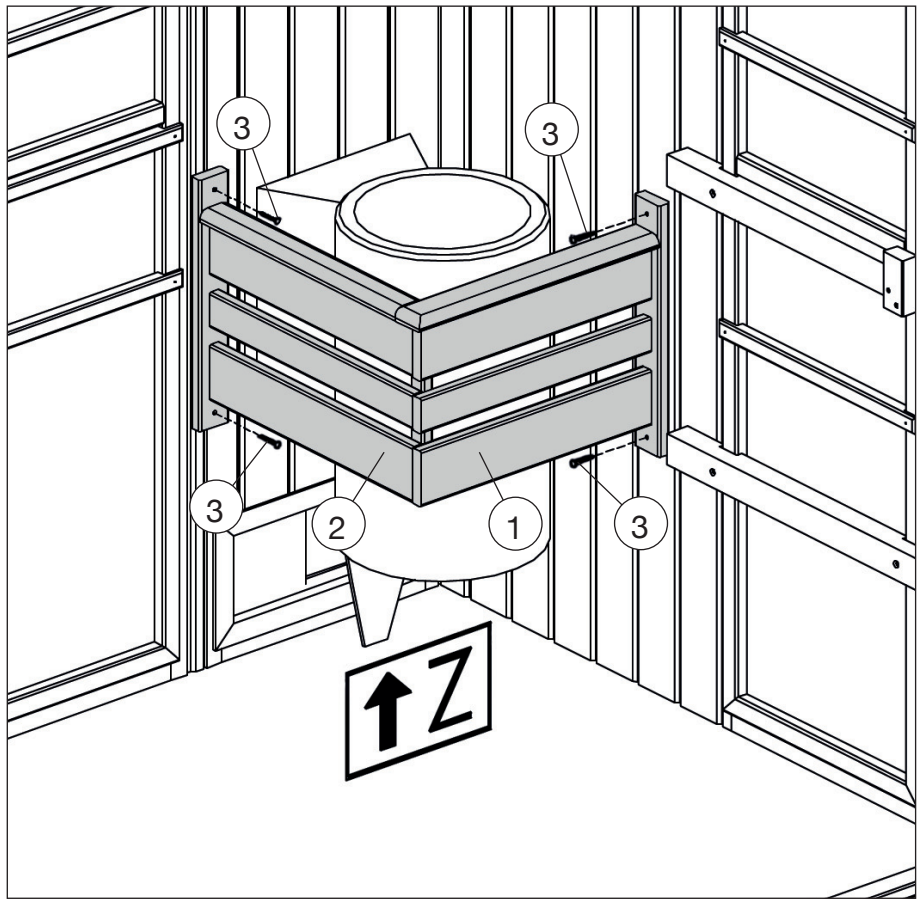



WEKA Holzbau GmbH

Johannesstr. 16, 17034 Neubrandenburg

Tel.: +49 (0)395 42908-0

Fax: +49 (0)395 42908-83

Mail: info@weka-holzbau.com

Web: www.weka-holzbau.com

MA Art.-Nr.: 800.0286.23.58